

Your new Coomber



Useable Distance

Outside: In ideal conditions the radio microphone will operate up to 50 metres from the receiver. Note obstructions, (such as metal objects, vehicles, scaffolding etc) between the microphone and the receiver will impede performance.

Indoors: Building structure can affect performance. Dense material, particularly steel beams, can interfere with the signal, so it will be worth experimenting to get the best results by positioning the receiver at a location most "visible" to the microphone user.

Note: Two radio microphones of the same frequency will not operate together - one will cancel the other out. With this in mind, please inform us of the frequency of your existing radio microphone should you wish to order a second radio microphone system.

Included in the box



1810 Clip



Battery

***Any problems always suspect the battery first, especially if the audio cuts in and out repetitively**



To fit the battery—unscrew the middle of the microphone to access the battery compartment.

Coomber standard is channel **0** then:

- **1** for UHF2
- **2** for UHF3
- **3** for UHF4

To change the channel press and hold the set button.

Fit the battery, noting the correct location of the **+** and **-**

On and off switch is located at the base of the radio microphone