



Your new Coomber



Outside: In ideal conditions the radio microphone will operate up to 30 metres from the receiver. Note obstructions, (such as metal objects, vehicles, scaffolding etc) between the microphone and the receiver will impede performance.

Indoors: Building structure can affect performance. Dense material, particularly steel beams, can interfere with the signal, so it will be worth experimenting to get the best results by positioning the receiver at a location most "visible" to the microphone user.

Note: Two radio microphones of the same frequency will not operate together - one will cancel the other out. Remove batteries when the microphone is to be stored for long periods.

Included in the box



Caps

 



 

2 AA Batteries

***Any problems always suspect the battery first, especially if the audio cuts in and out repetitively**



Selecting a channel

Press and hold the  button, the screen will then flash.

Use the  up and  down buttons to select a channel, press the  again to set.

Power LED

On and off switch is located at the base of the radio microphone— press and hold



Hi / low sensitivity or mute

Fitting the batteries

Remove the protective cap. Slide the battery compartment back off, replace noting the correct location of the + and - or remove batteries for storage.

Replace the back.