


The cassette deck in your **coomber** product has been upgraded to a full logic mechanism. Please refer to the instructions below for correct cassette deck operation.

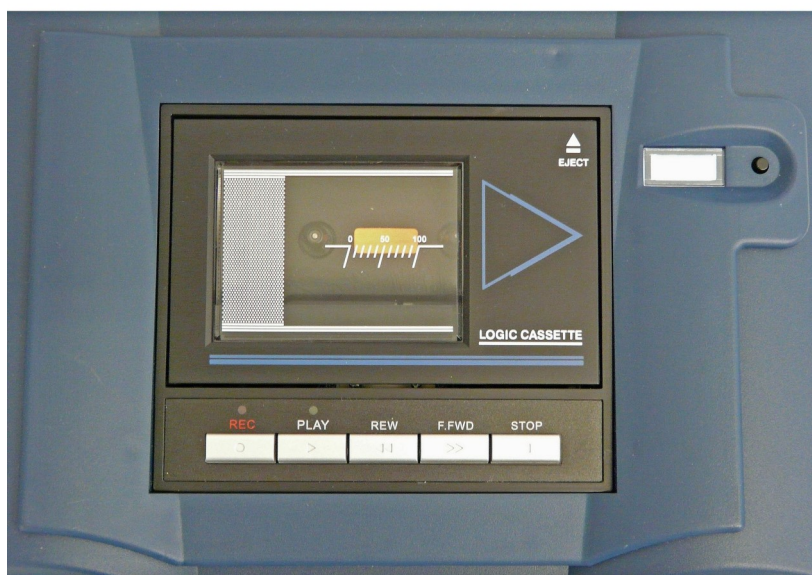

Eject - To open and close the cassette tray press the EJECT logo. The tray will latch and unlatch automatically.

Turns Counter - The turns counter gives an indication of the current tape position.

Reset Turns Counter - Pressing the reset turns counter button resets the turns counter to 000.

REC - Press once for record standby. Press again (or play) for recording.

PLAY - Press to play cassette tape.

REW - Press to rewind the cassette tape.

F.FWD - Press to fast forward the cassette tape.

STOP - Press to stop cassette tape playback, rewind, fast forward or recording.